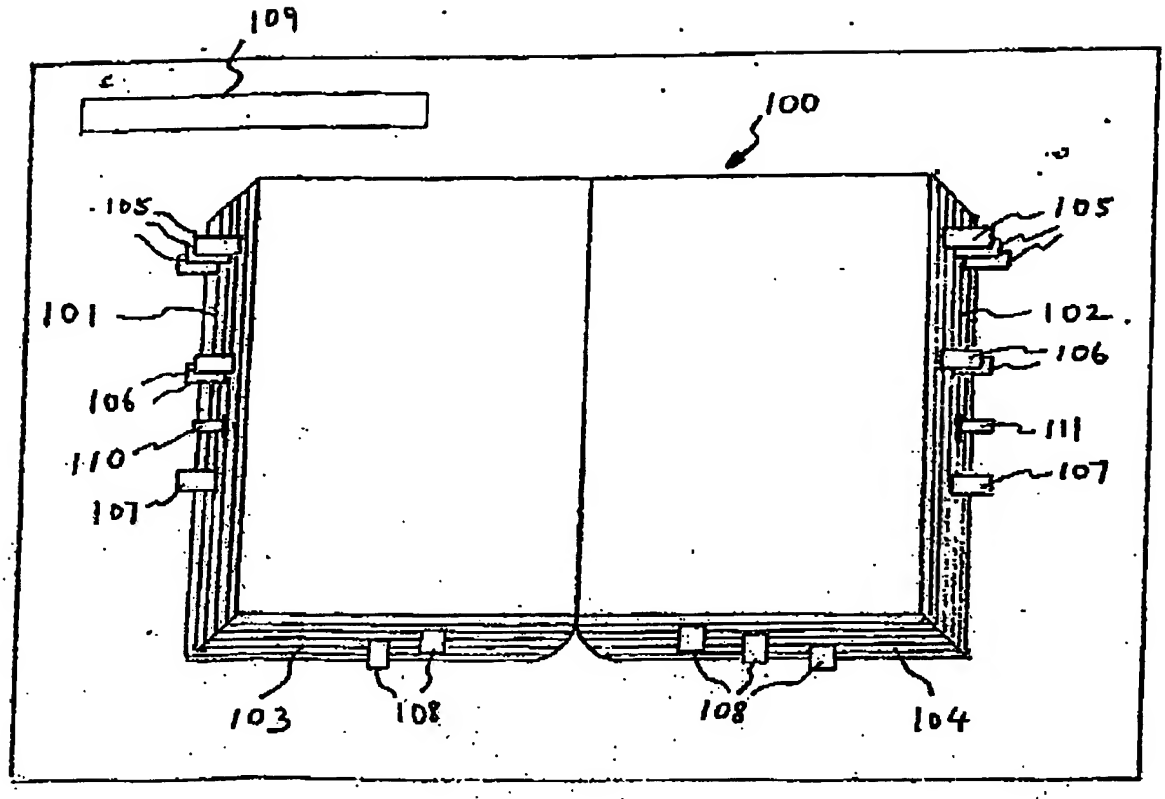

FIG. 1A

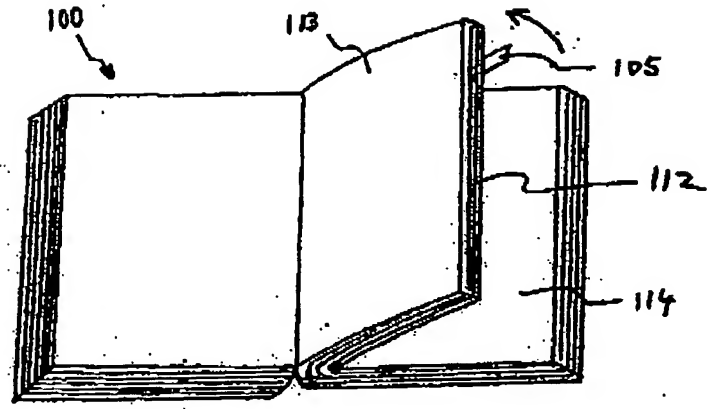

FIG. 1B

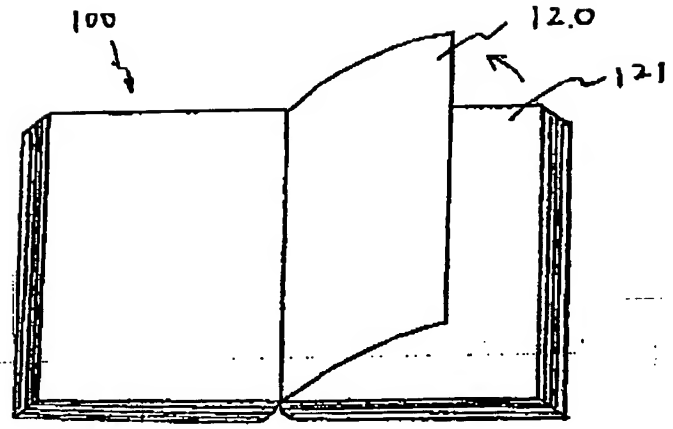

FIG 1C

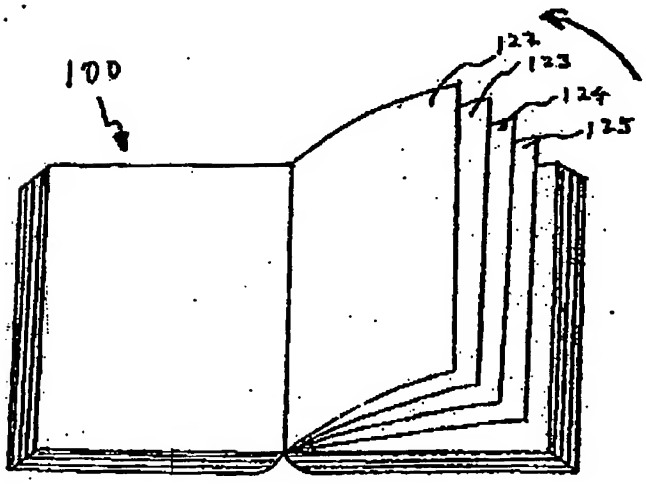

FIG. 1D

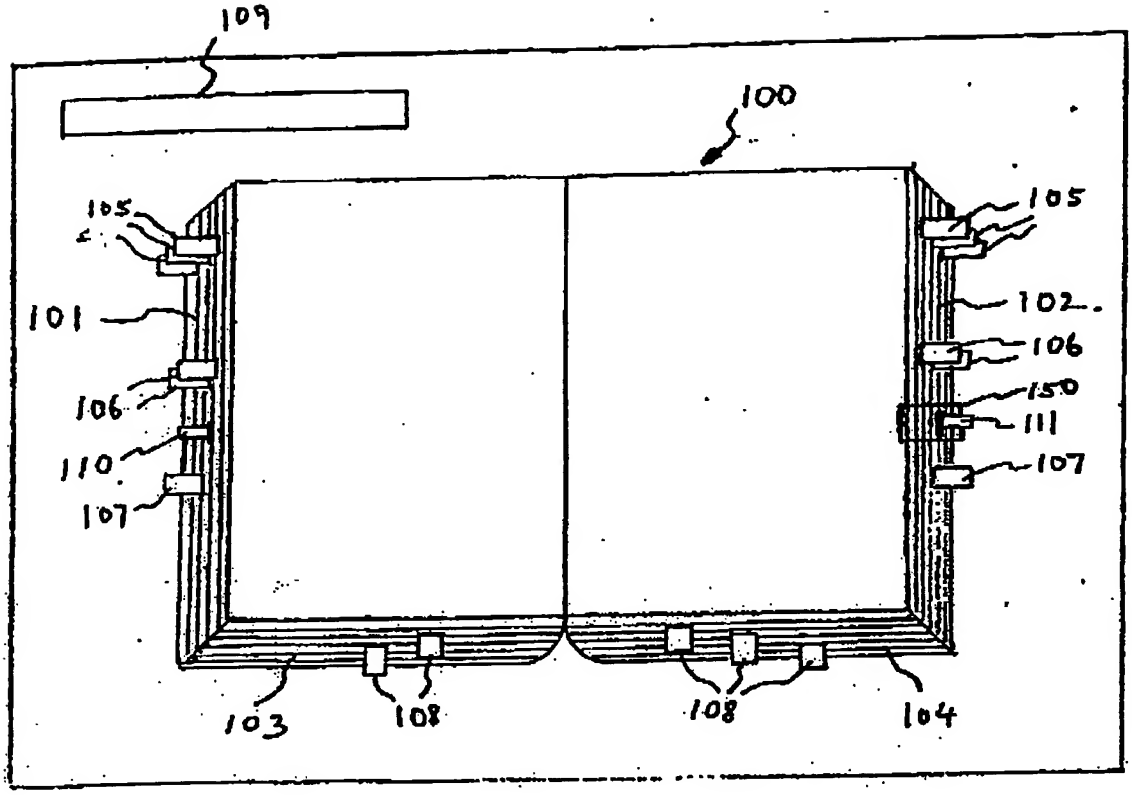
109
100
105
105
101
102
106
106
150
111
110
107
107
103
108
108
104

FIG. 1E

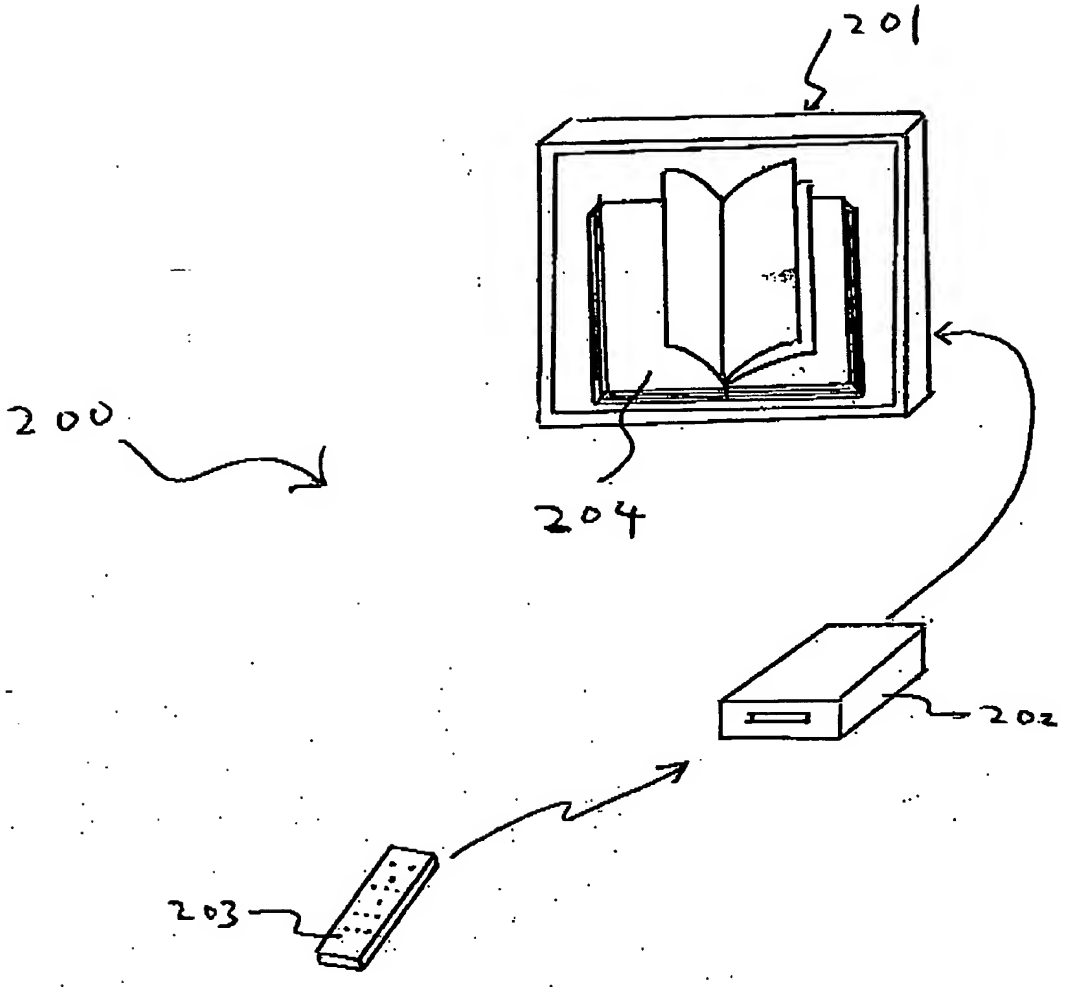

FIG. 2

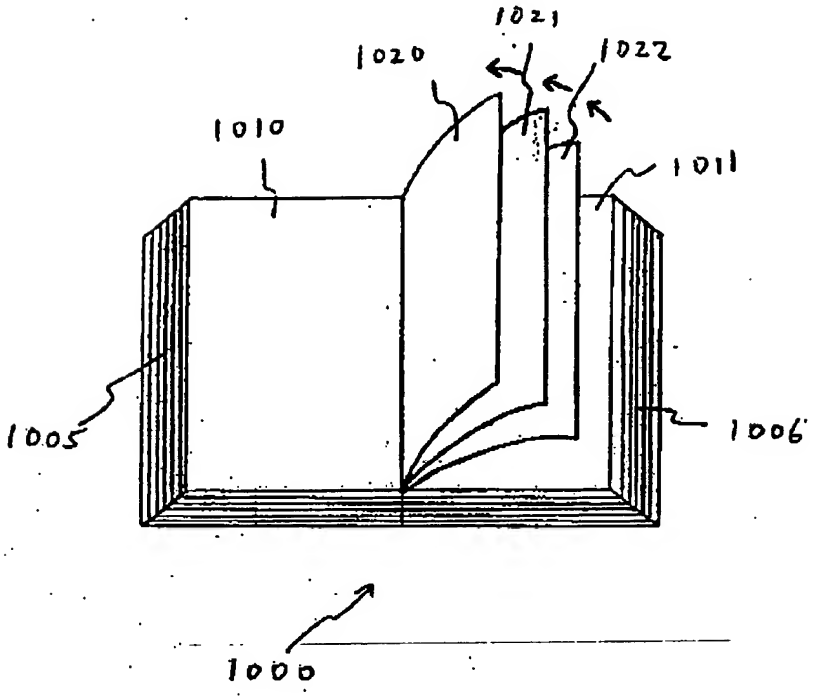

FIG. 3A

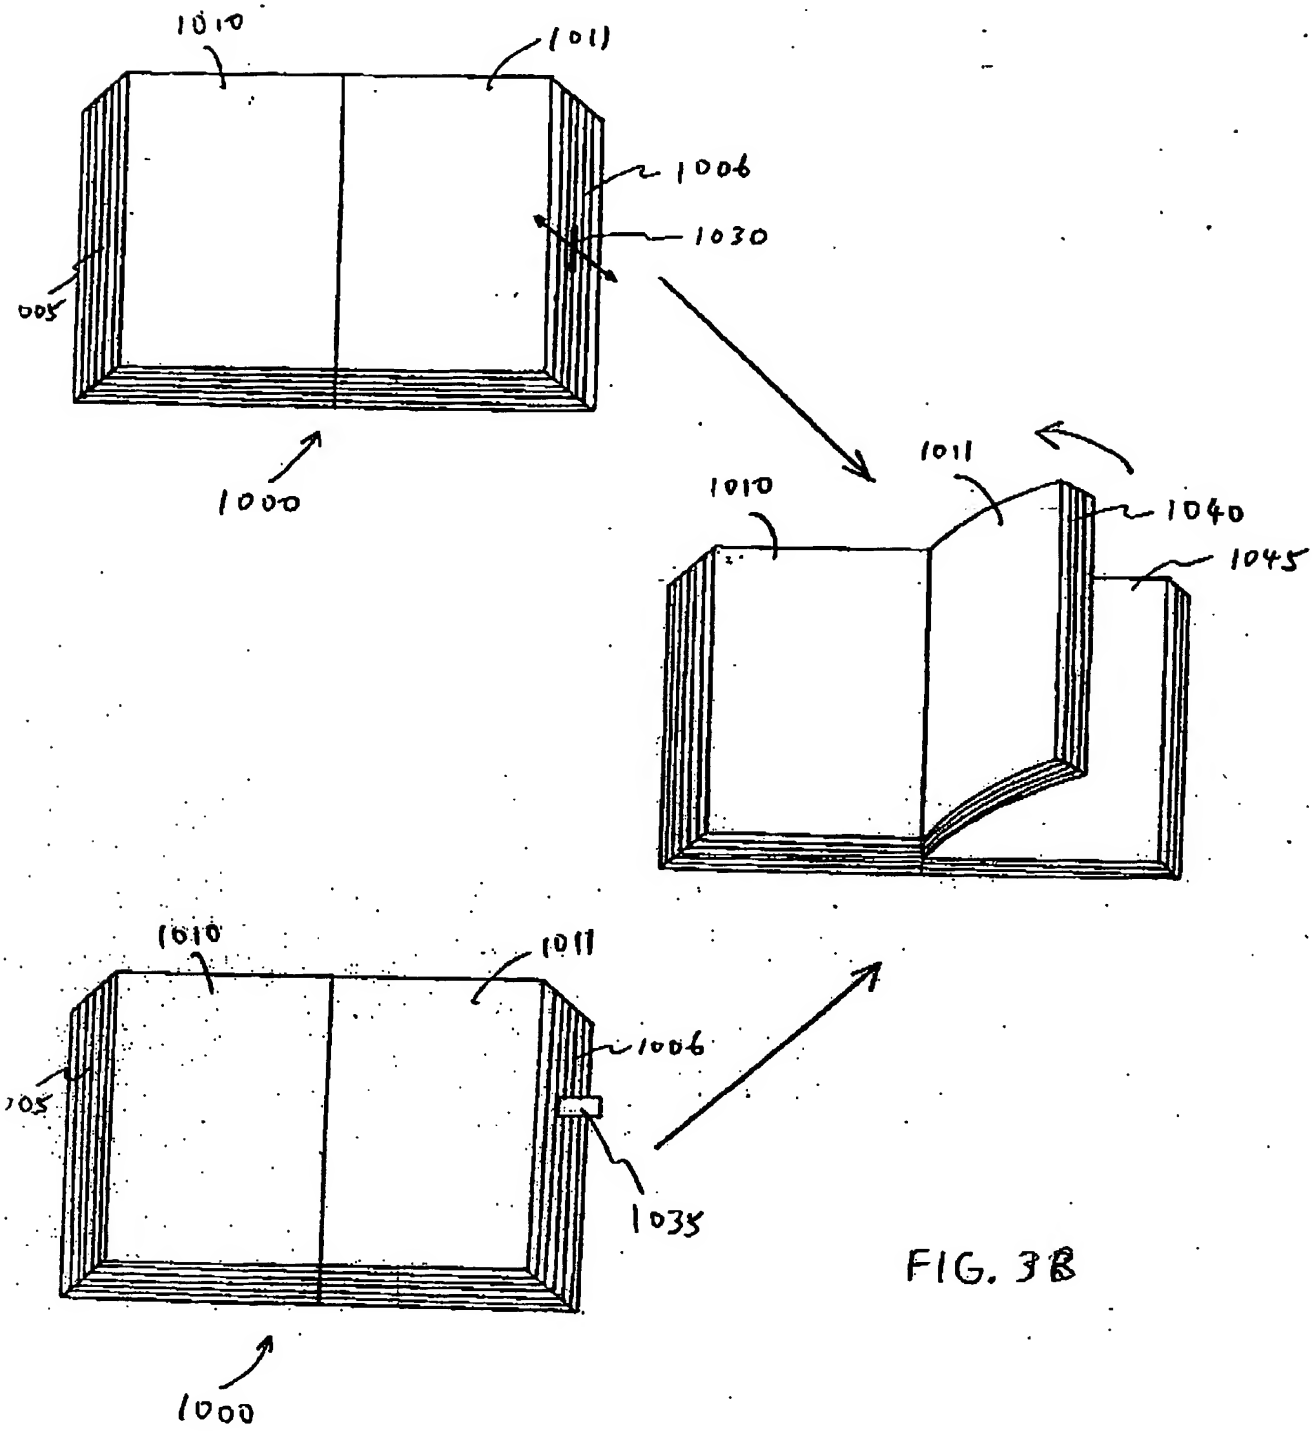
1010
1011
1006
1030
1005
1000
1011
1010
1040
1045
1010
1011
1006
1005
1035
1000

FIG. 3B

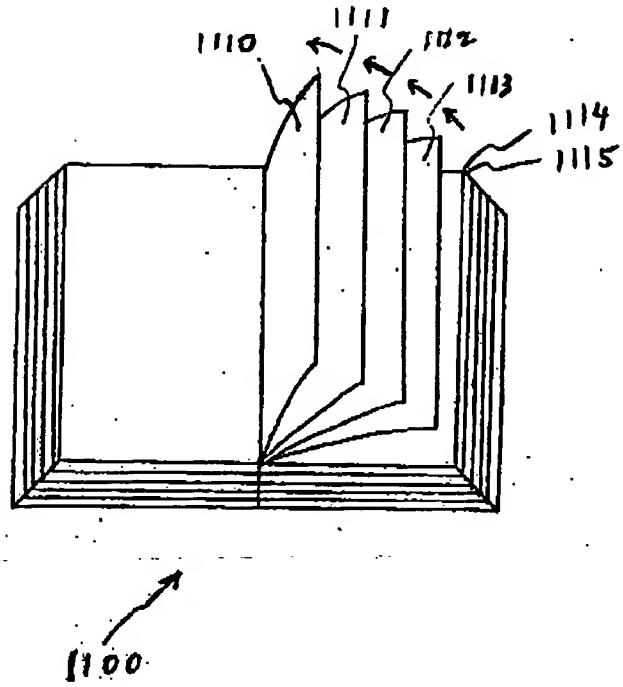

FIG. 49A

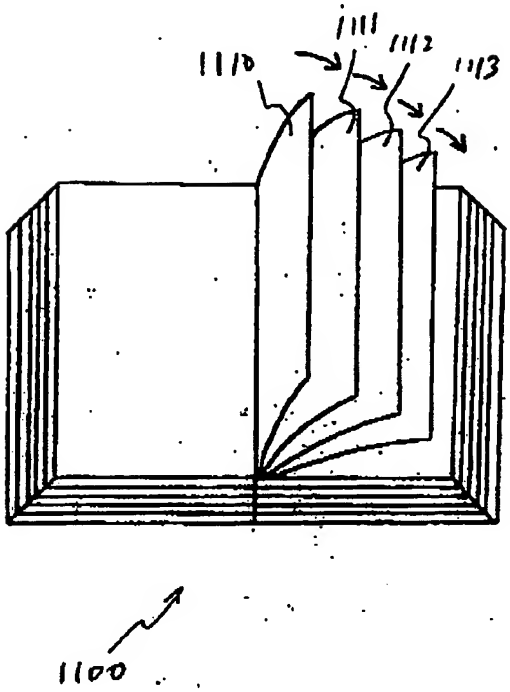

FIG. 4B

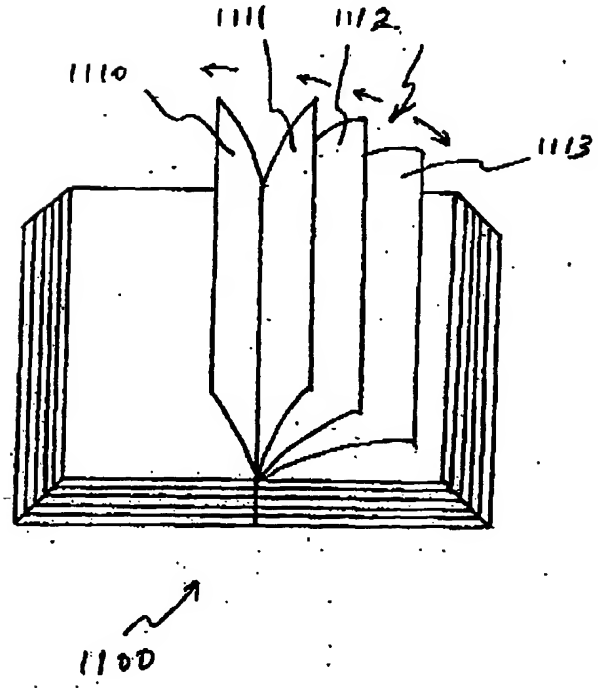

FIG. 4C

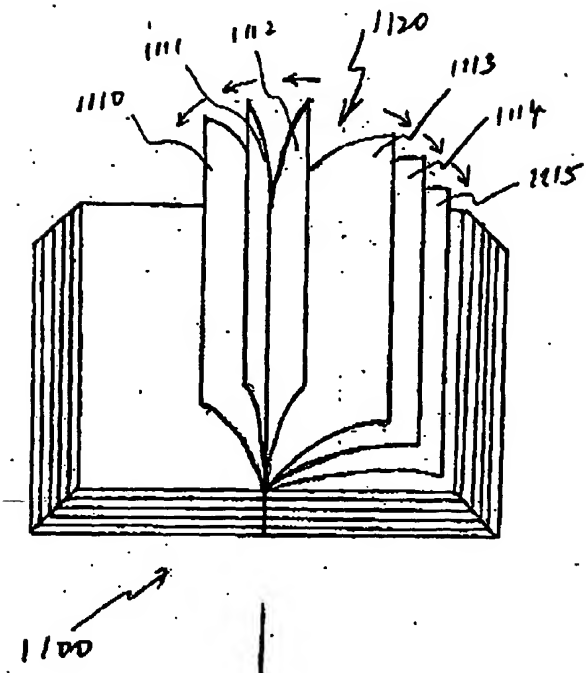
1111
1112
1120
1113
1110
1114
1115
1100

FIG. 4D

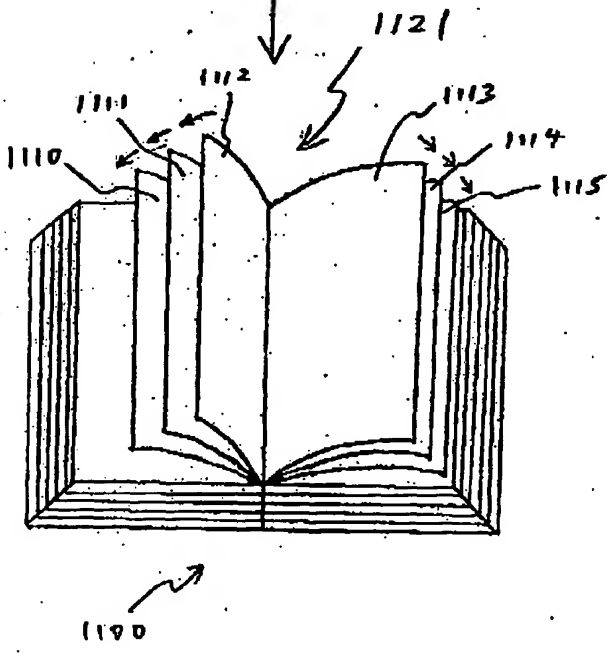
1121
1112
1111
1113
1110
1114
1115
1100

FIG. 4E

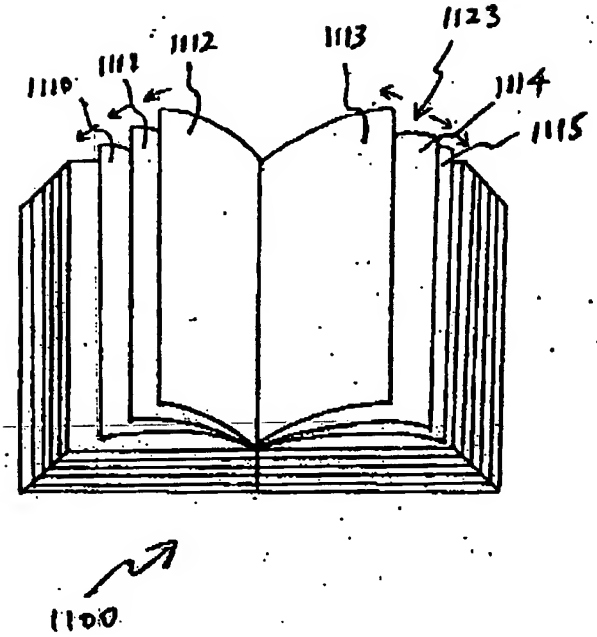

FIG. 4F

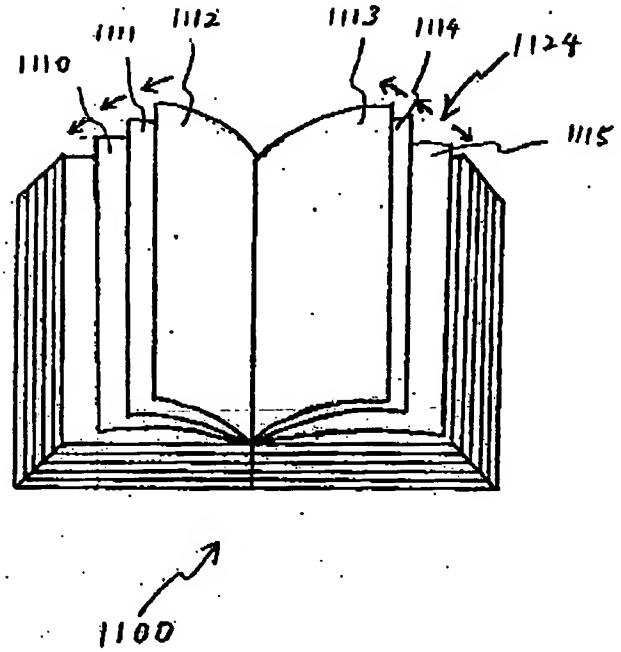

FIG. 4G

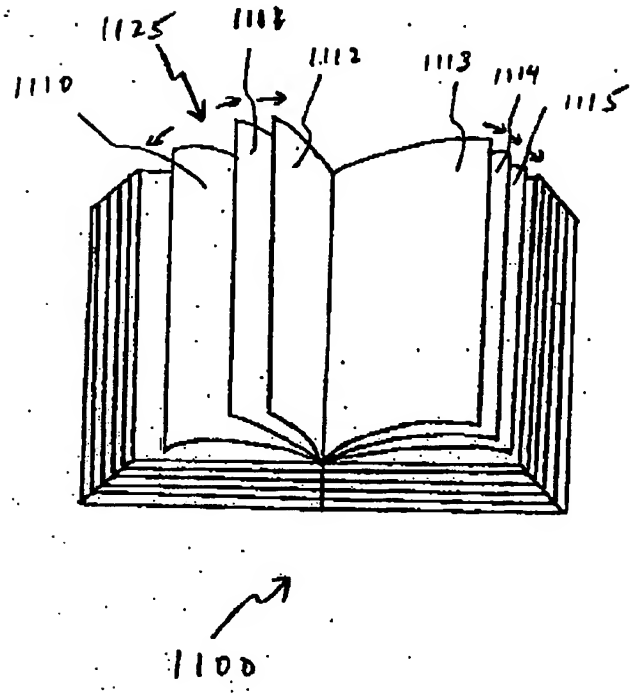

FIG. 4H

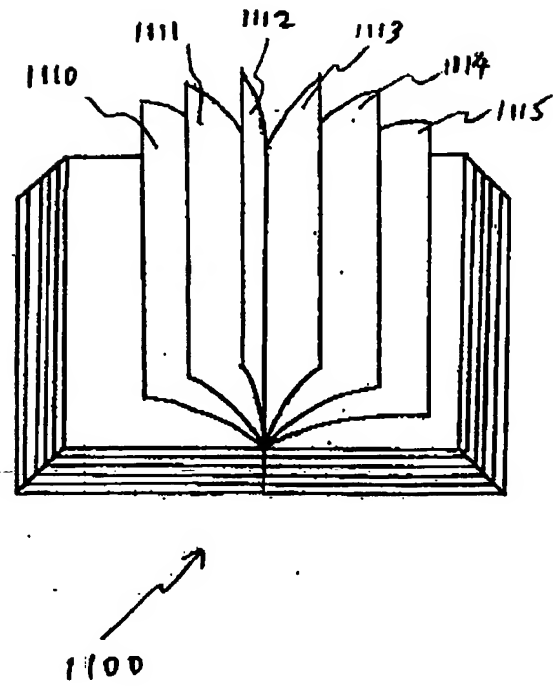

FIG. 4I

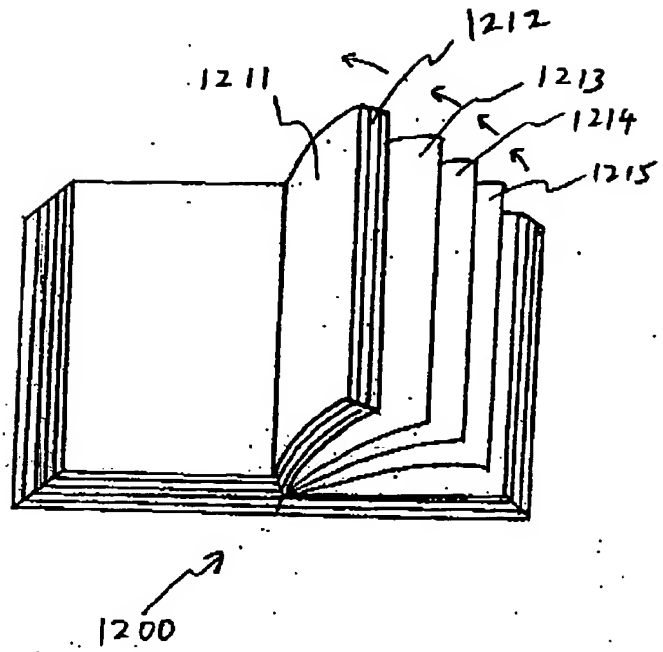

FIG. 5A

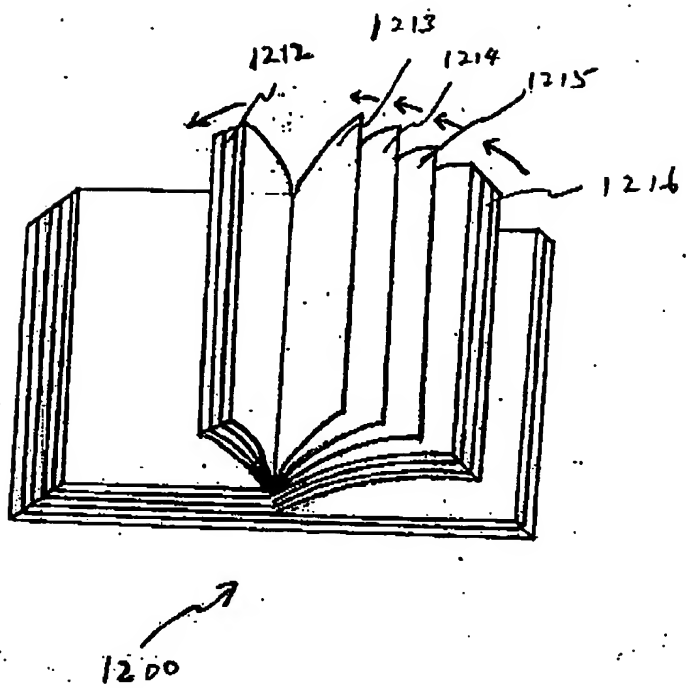

FIG. 5B

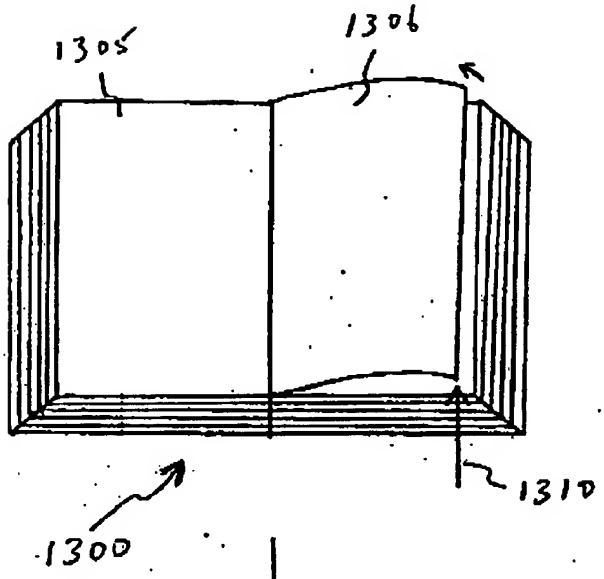

FIG. 6A

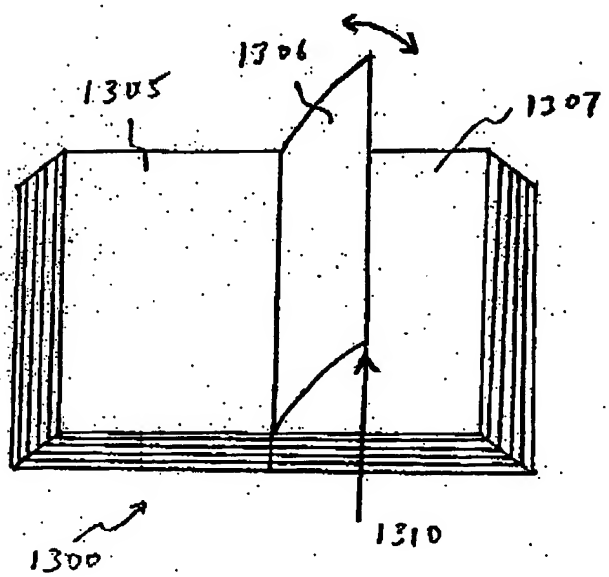

FIG. 6B

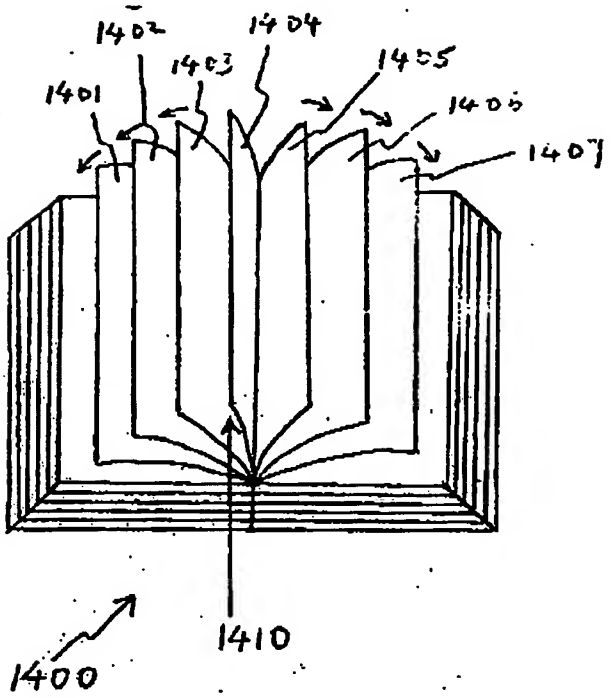

FIG. 7

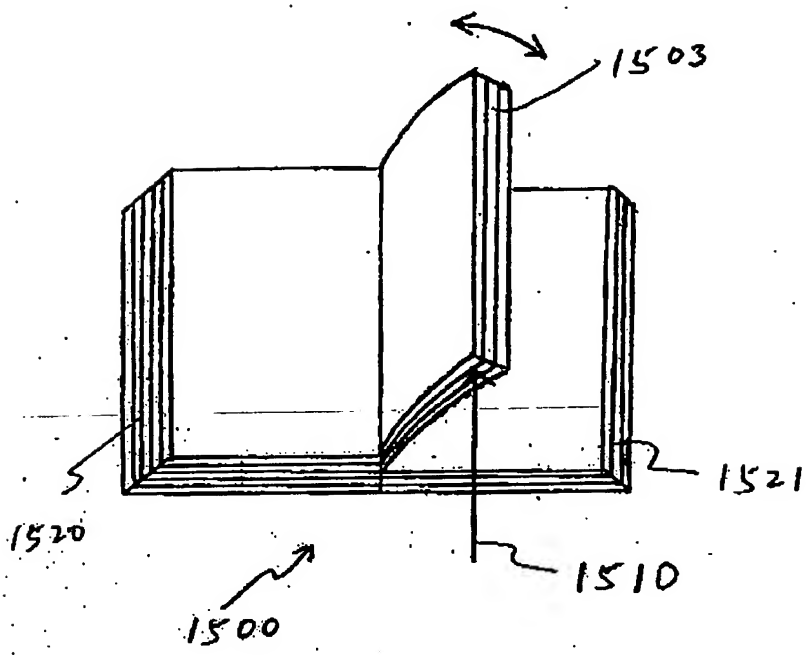

FIG. 8

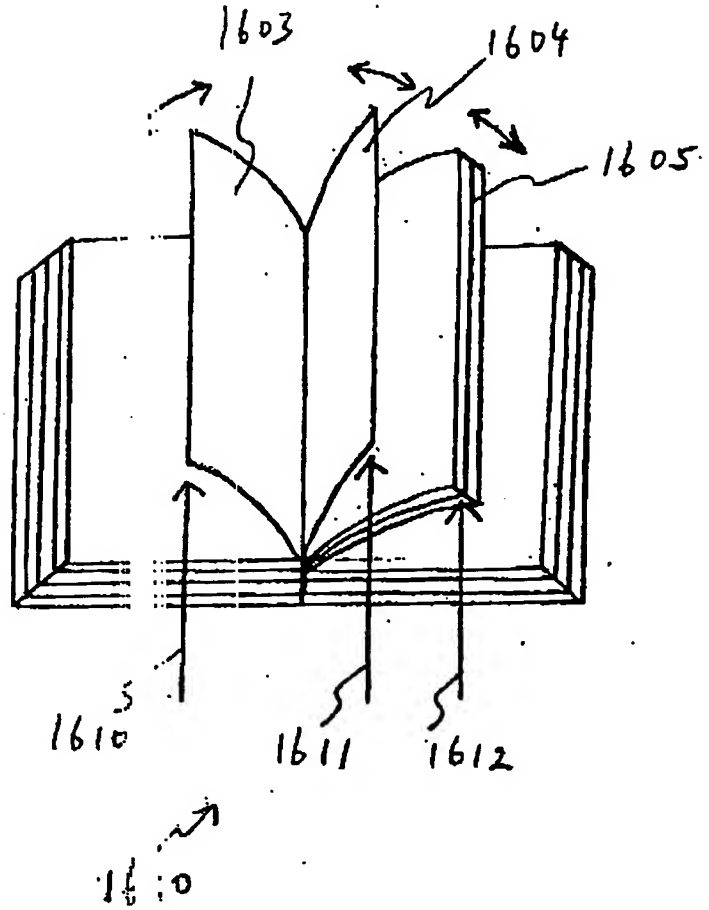

FIG. 9

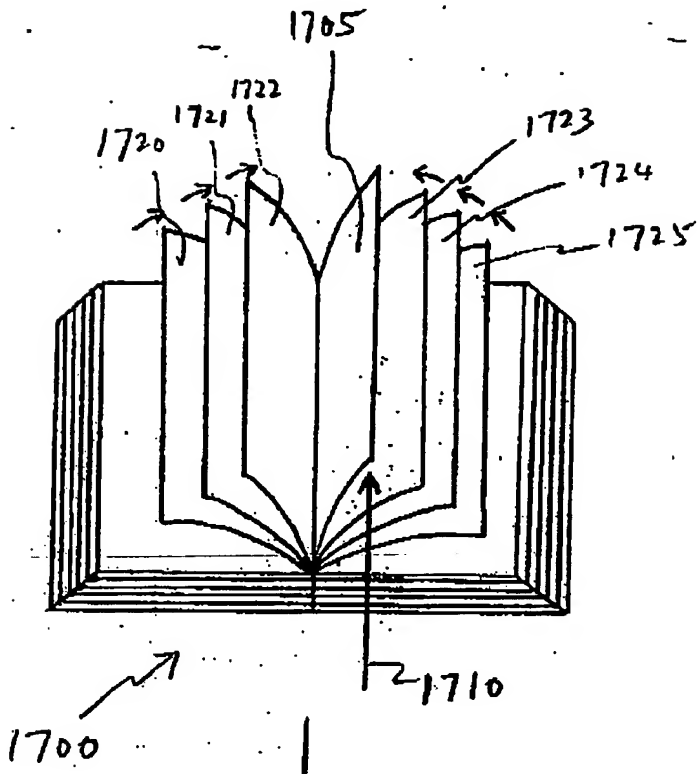

FIG. 30A

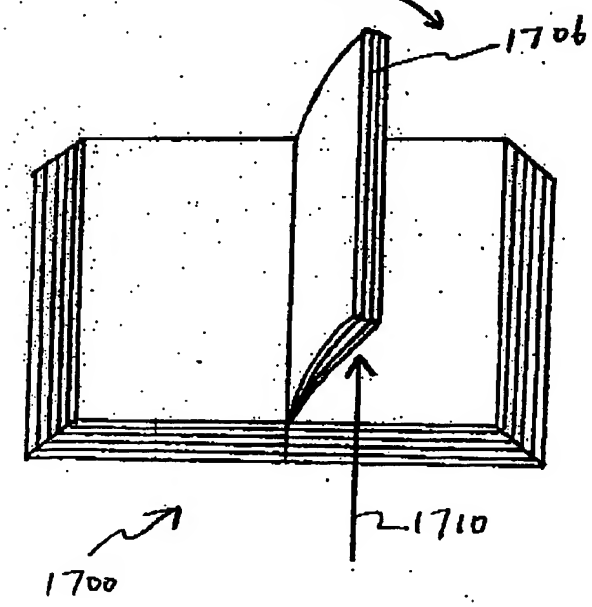

FIG. 30B

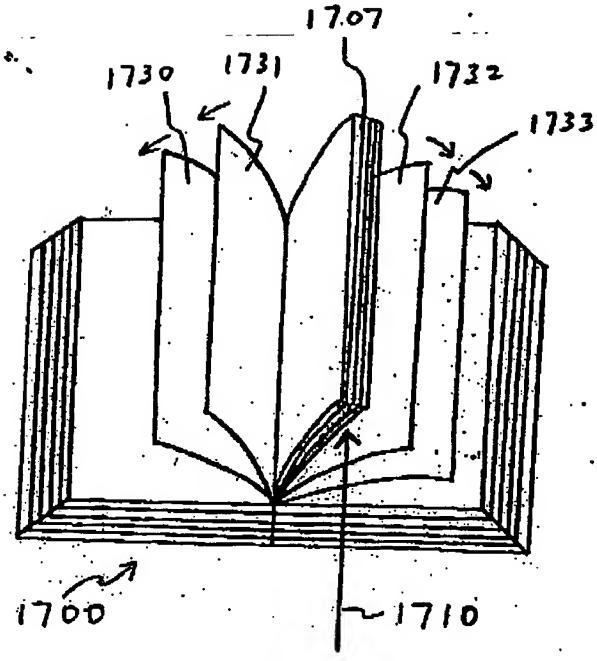

FIG. 10C

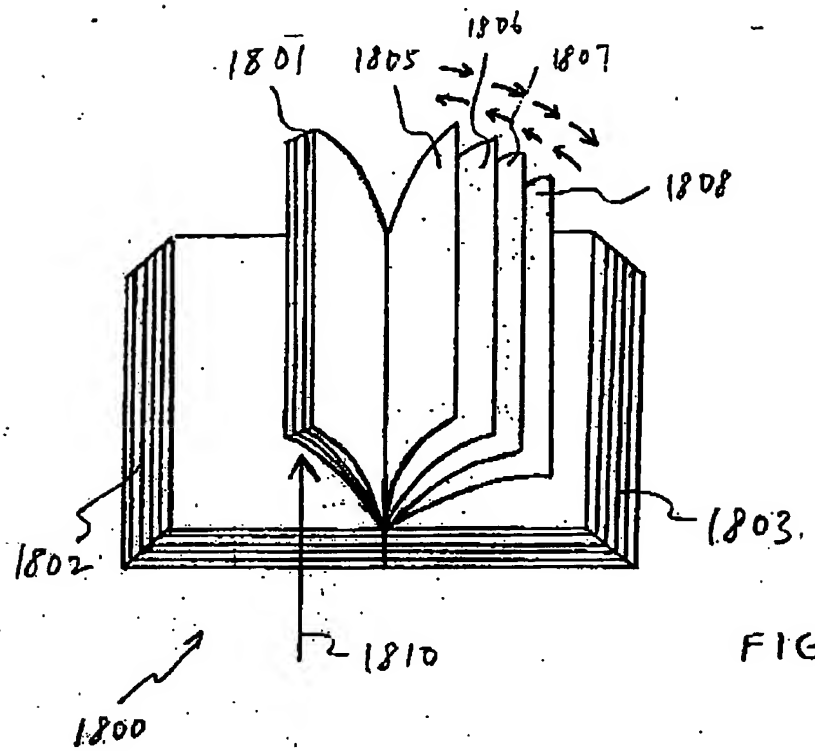

FIG. 18A

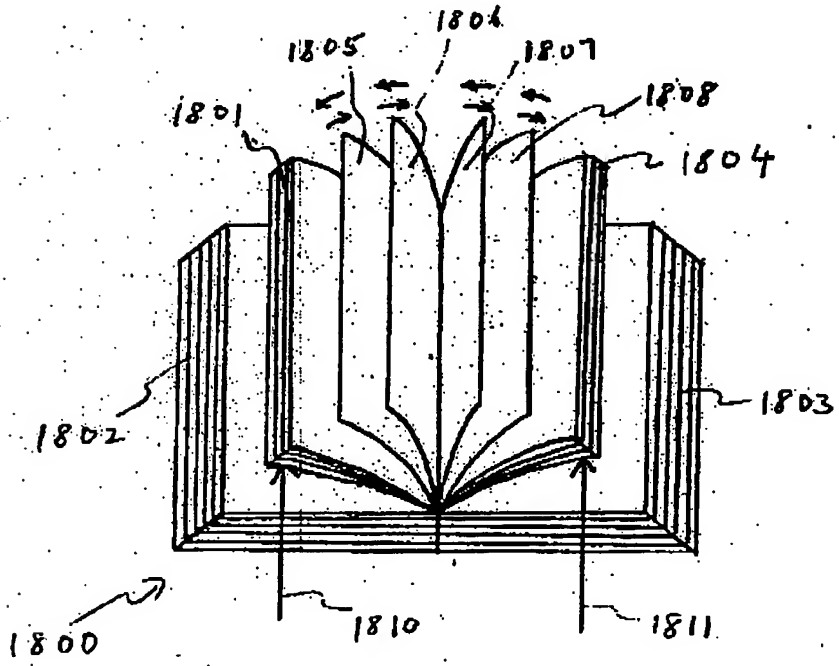

FIG. 18B

BASIC AND COMPLEX FLIPPING ACTIONS

1901 Direction of Movement
1902 Speed of Movement
1903 Select to Jump to a Specified Point in Document
1904 Jump to a Specified Point in Document
1905 Permanent Bookmarking
1906 Finger Bookmarking
1907 Launch a Single Flipping Page
1908 Launch Multiple Flipping Pages at a Specific Interval (Speed)
1909 Reverse Direction of Last Trailing Page ("Opening Up")
1910 Reverse Direction of Last N Trailing Pages ("Opening Up")
1911 Reverse Direction of Any Selected Group of Flipping Pages ("Opening Up")
1912 Freeze One or More Than One Flipping Pages in Mid-flip
1913 Unfreeze Frozen Pages and Let Pages Continue to Flip in Directions Prior to Freezing
1914 Unfreeze Frozen Pages and Let Pages All Flip in the Same Direction
1915 Unfreeze Frozen Pages and Some Pages Flip to Left Side and Some to Right Side of Book
1916 Unfreeze Frozen Pages and Let Subgroups of Pages Flip in Different Directions
1917 Jump and Make a Thick Collection of Pages Flip Together
1918 Launch Flipping Pages While Thick Collection of Pages is Flipping
1919 Launch One or More Other Thick Collections of Pages While Other Pages are Flipping
1920 Select to Hold a Page
1921 Move Held Single Page in Any Desired Direction at Desired Speed
1922 Select to Hold a Thick Collection of Pages
1923 Move Held Single Thick Collection of Pages in Any Desired Direction and Speed
1924 Select to Hold More Than One Page or Thick Collection of Pages
1925 Move Held Pages and Thick collections of Pages in Any Desired Direction and Speed
1926 Hold a Single Page in Mid-flip and Collect Other Pages That Flip Onto It
1927 Hold a Single Thick Collection of Pages in Mid-flip and Collect Other Pages That Flip Onto It
1928 Hold a Single Page or a Thick Collection of Pages in Mid-flip and Execute All (All the Above as well as This) Page Flipping Actions Between It and One of the Thicknesses on the Side of the Book
1929 Hold Any Two Pages or Thick Collections of Pages in Mid-flip and Execute All (All the Above as well as This) Page Flipping Actions Between Them
1930 Hold a Single Thick Collection of pages in Mid-flip While Releasing One or More Pages From the Collection
1931 Select a Desired Split Point on a Held Single Thick Collection of Pages in Mid-flip and Split the Collection of Pages into Two Separate Collections of Pages.

FIG. 12

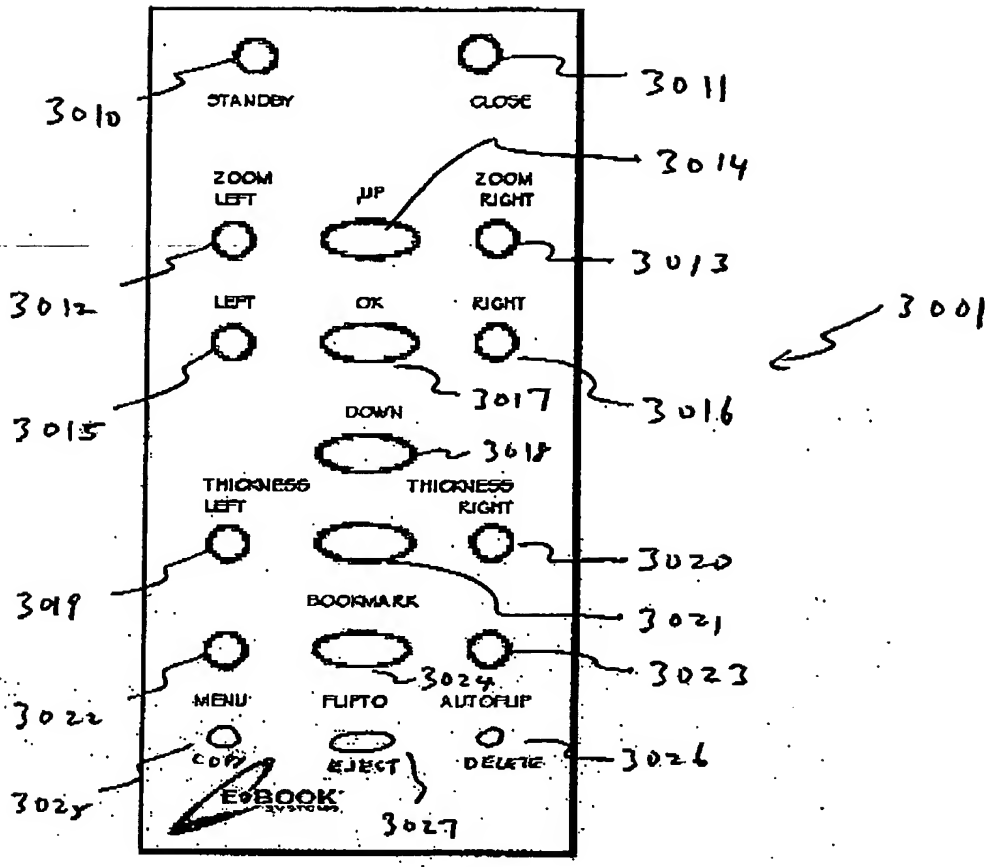
3010
STANDBY
CLOSE
3011
3014
ZOOM LEFT
UP
ZOOM RIGHT
3013
3012
LEFT
OK
RIGHT
3001
3015
3017
3016
DOWN
3018
THICKNESS LEFT
THICKNESS RIGHT
3020
3019
BOOKMARK
3021
3023
3024
3022
MENU
FLIPTO
AUTOFLIP
3026
3025
EJECT
DELETE
EBOOK
3027

FIG. 13

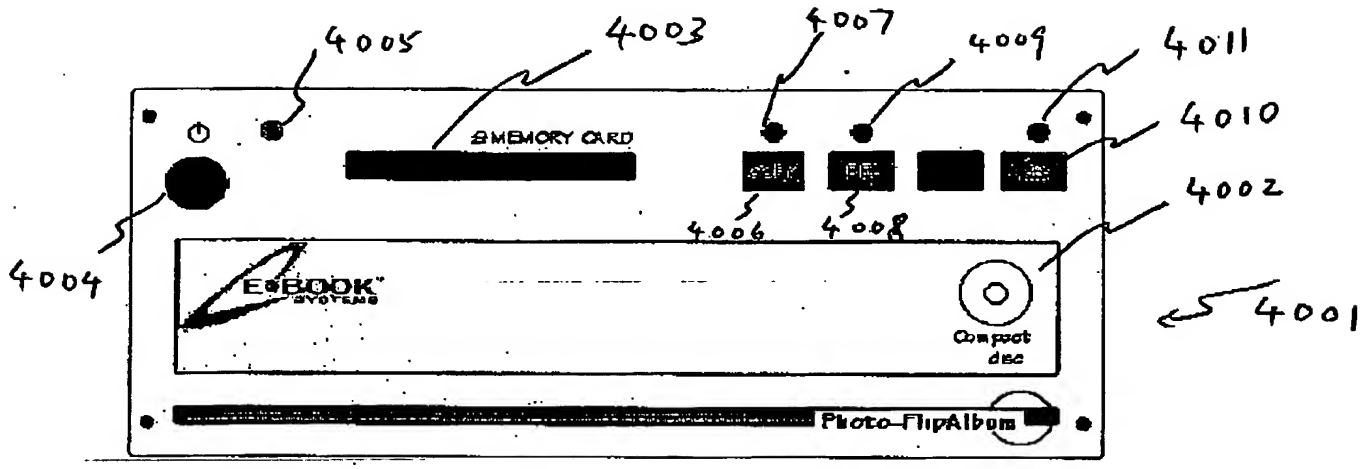
4005
4003
4007
4009
4011
4010
4002
4004
4006
4008
4001
MEMORY CARD
E-BOOK
SYSTEMS
Compact disc
Photo-FlipAlbum

FIG. 14

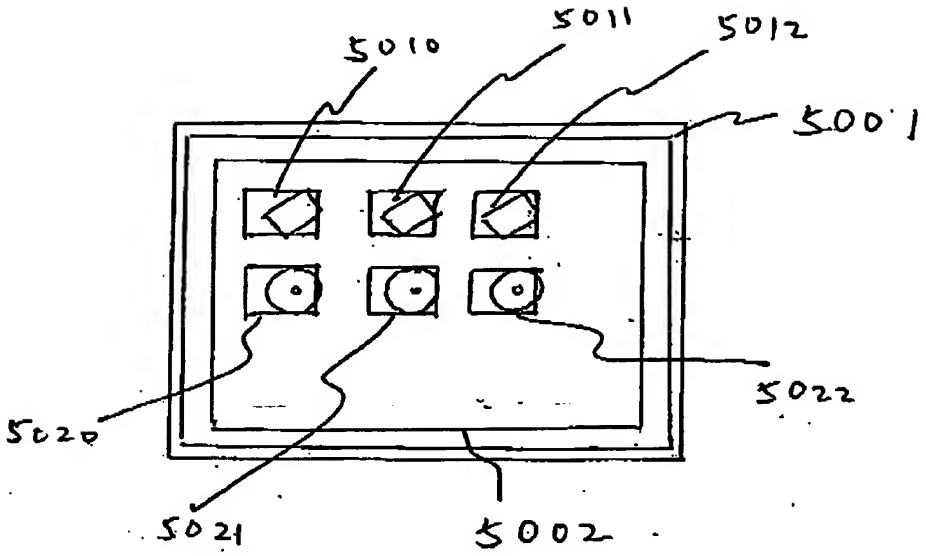

FIG 15

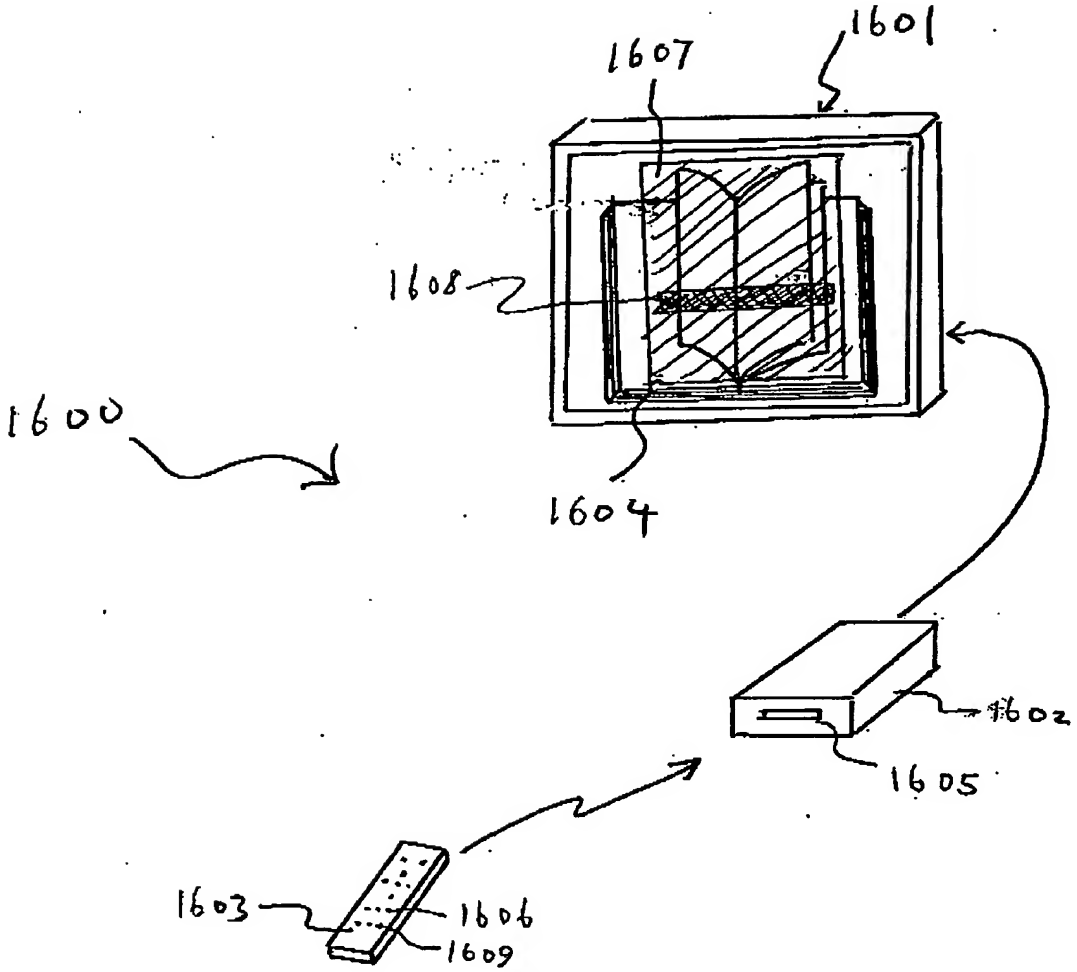

FIG. 16

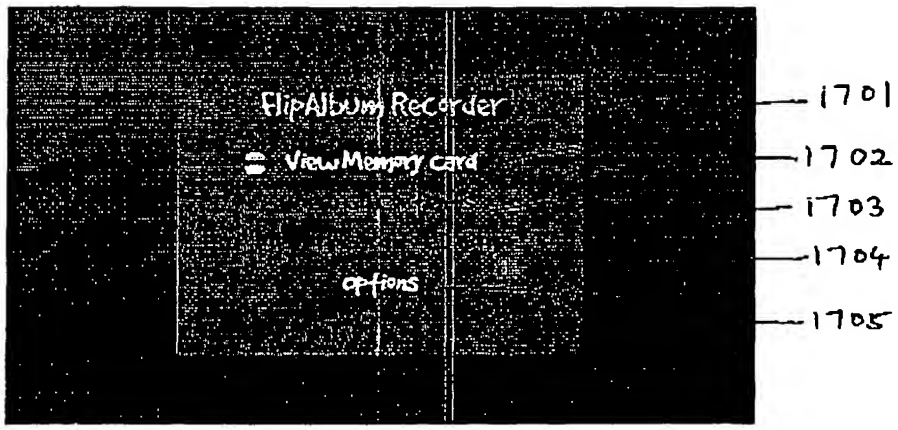
FlipAlbum Recorder
View Memory Card
options
1701
1702
1703
1704
1705

FIG. 17

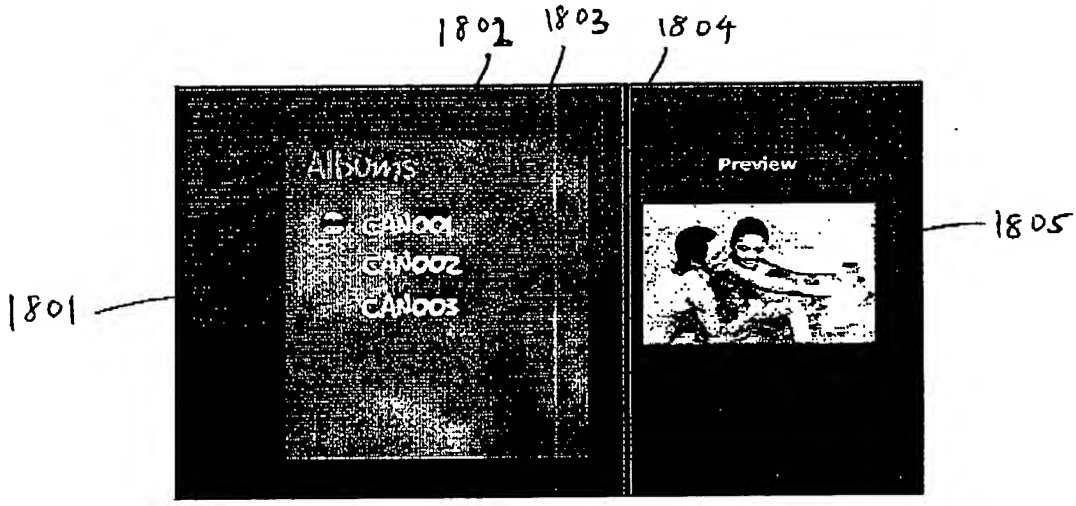
1802
1803
1804
Albums
CANOO1
CANOO2
CANOO3
Preview
1801
1805

FIG. 18

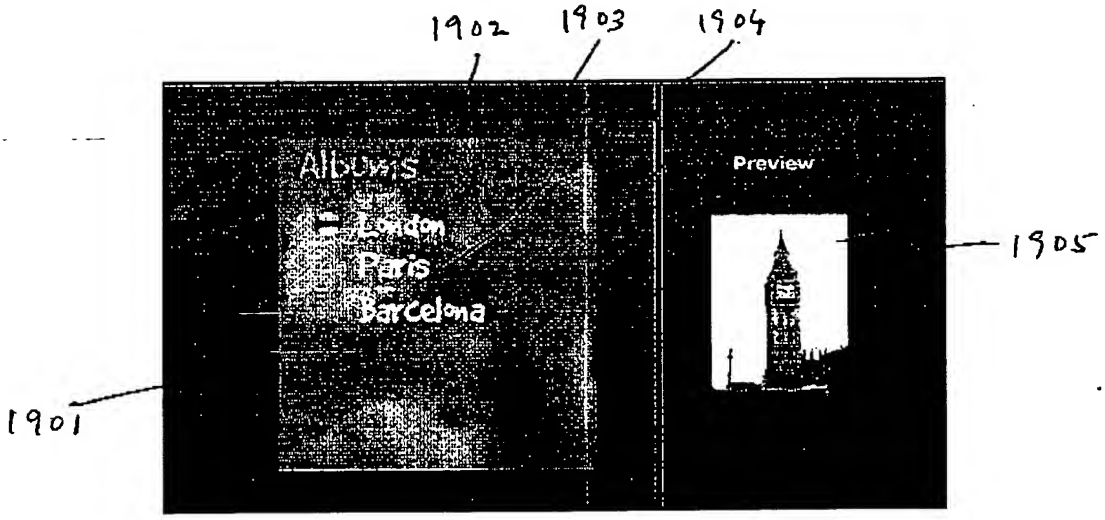
1902
1903
1904
Albums
London
Paris
Barcelona
Preview
1905
1901

FIG. 19

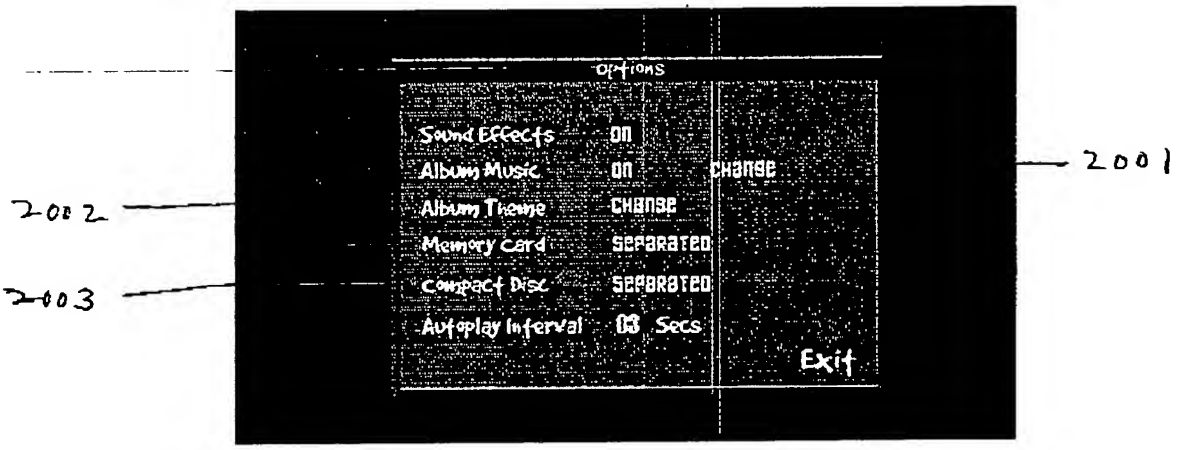
Options
Sound Effects ON
Album Music ON Change
Album Theme Change
Memory Card Separated
Compact Disc Separated
Autoplay Interval 03 Secs
Exit
2001
2002
2003

FIG. 20

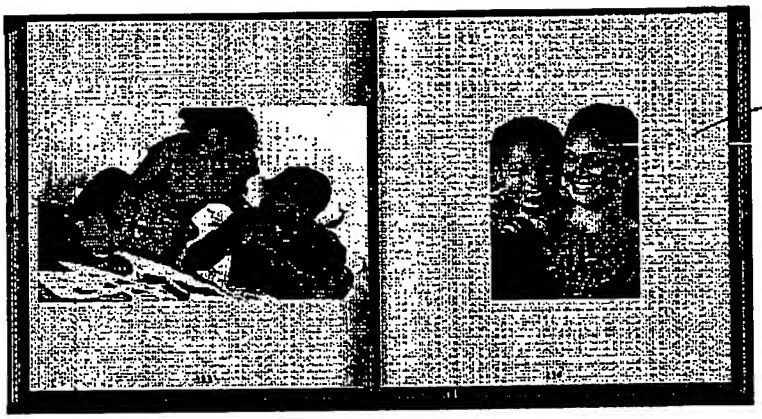

FIG. 21

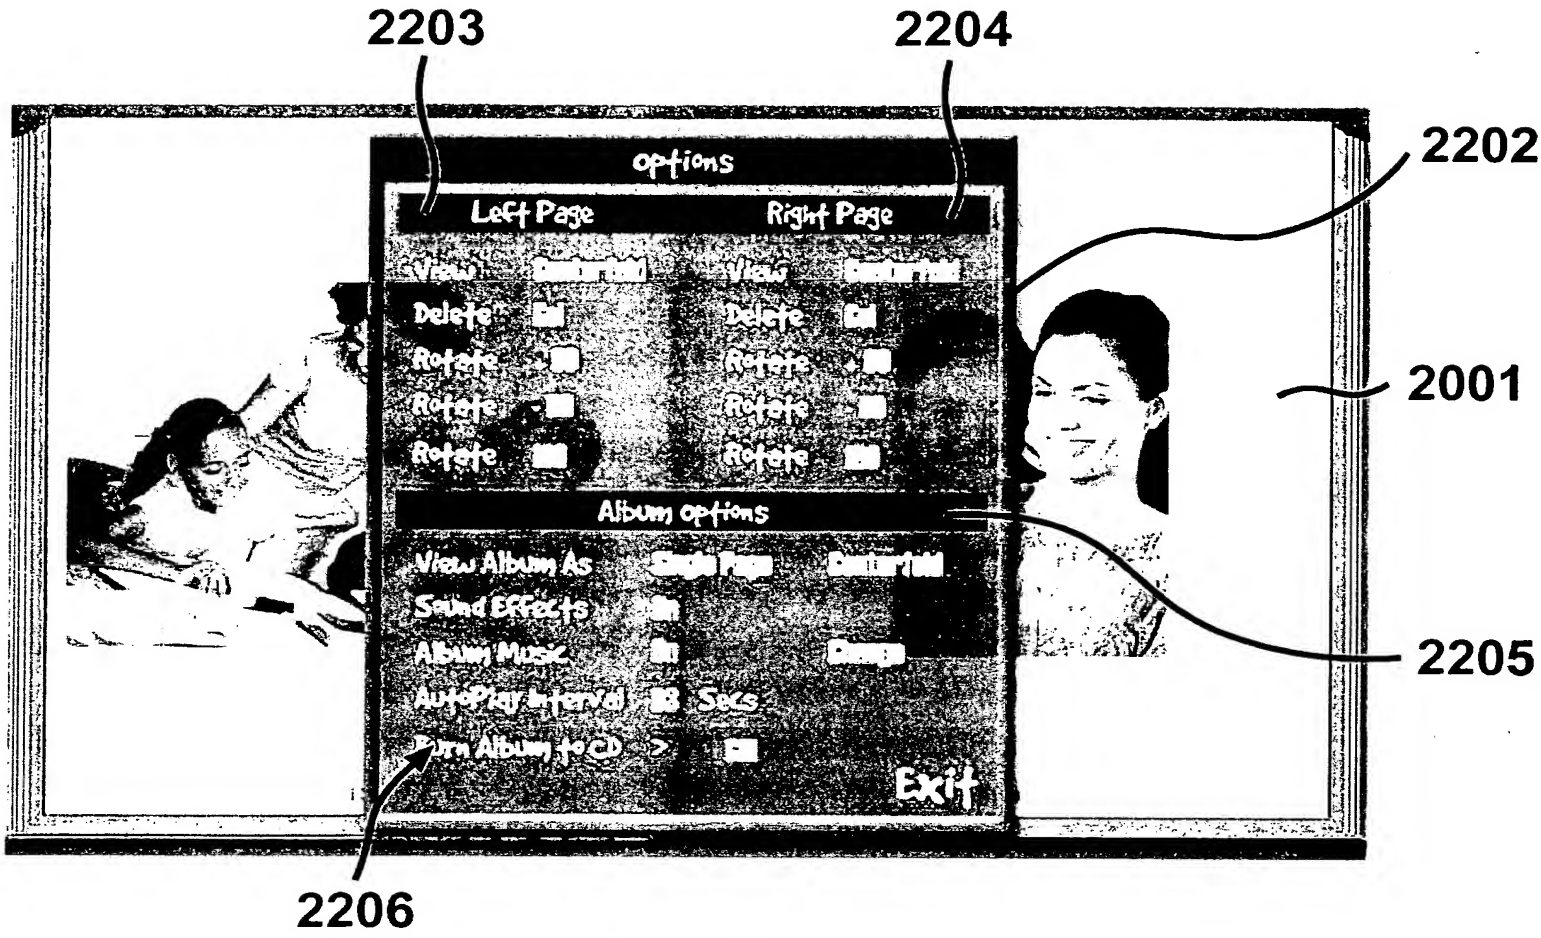
2203
2204
2202
2001
2205
2206
Options
Left Page
Right Page
Delete
Rotate
Album options
Exit

Fig. 22

Fig. 23